



TWO GANG SNAP TOGETHER JUNCTION BOX

Part Number: JBP2FS



FOR USE WITH PANDUIT SURFACE RACEWAY ROUTING SYSTEM

INSTALLATION INSTRUCTIONS

©Panduit Corp. 2005

Printed in U.S.A.


CONDUIT APPLICATION

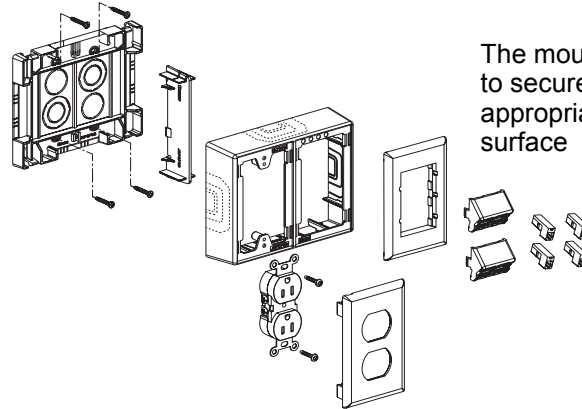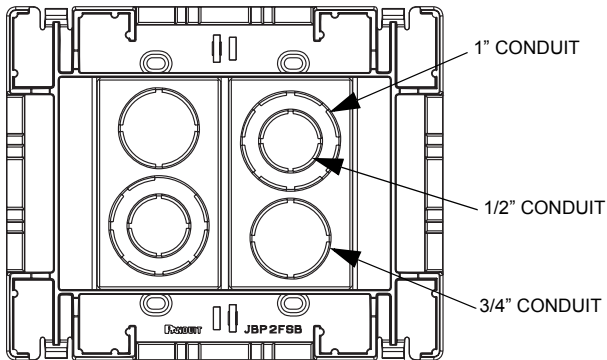


The mounting hardware used to secure the base shall be appropriate for the mounting surface

IN-WALL BOX APPLICATION

RECTANGULAR
BREAKOUT


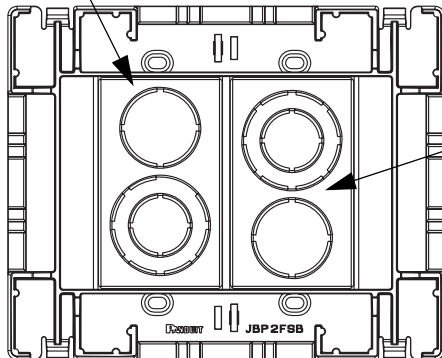


RECTANGULAR
BREAKOUT

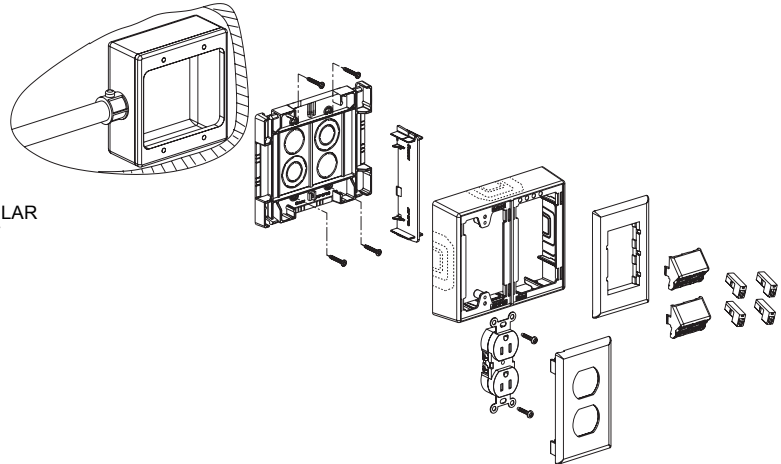


POWER/DATA APPLICATION

RACEWAY
BREAKOUTS

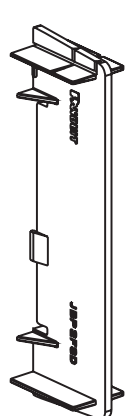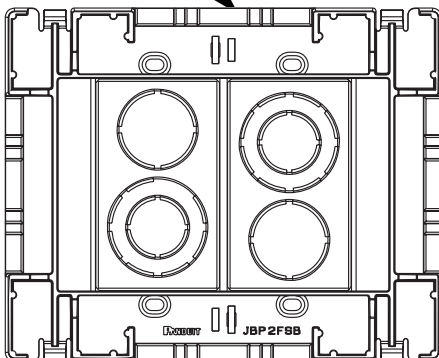

DIVIDER



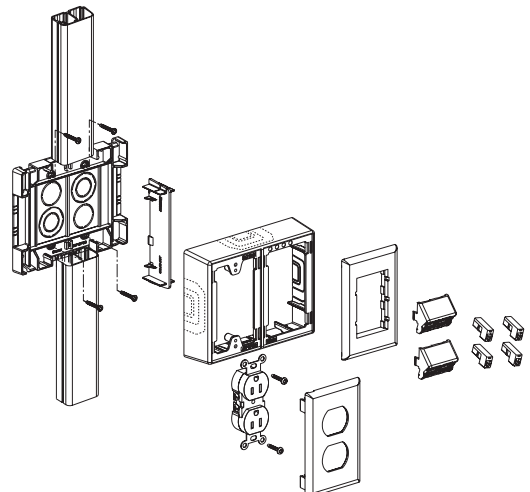


For Technical Assistance call: 866-405-6656


POWER JUNCTION BOX INSTALLATION INSTRUCTIONS

BASE BREAKOUTS



BASE	RACEWAY
A	LDPH3, LDS3, LD3, PD3
B	LDPH5, LDS5, LD5, PD6
C	LDPH10, LD2P10, LD10
D	T45

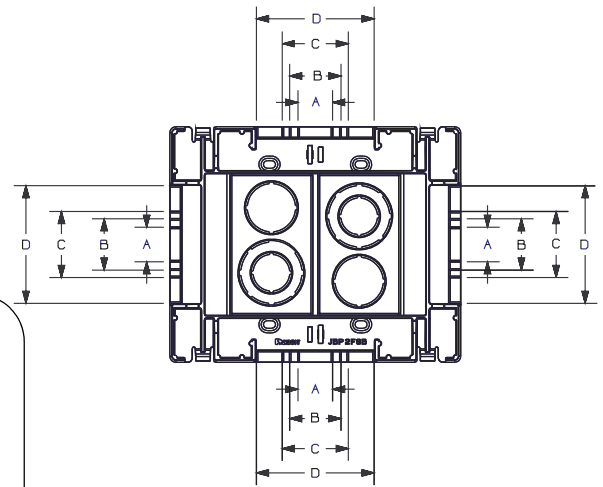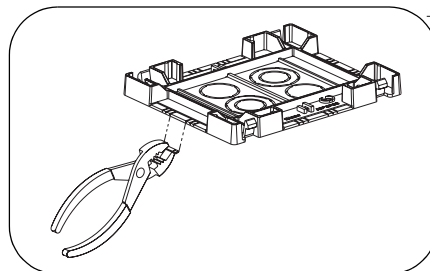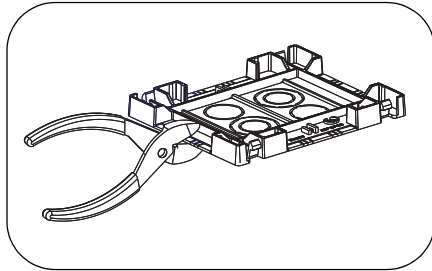



COVER BREAKOUTS

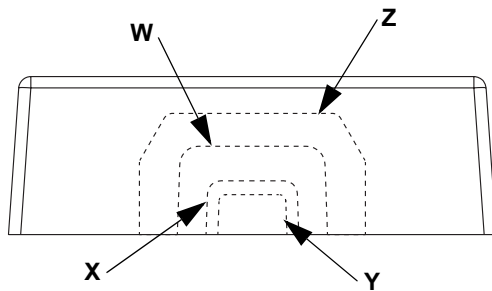


COVER	RACEWAY	ADAPTER
W	LD10, LDPH10, LD2P10	-
W	PD3	BA3 *
W	PD6	BA6 *
X	LD5, LDPH5, LDS5	-
Y	LD3, LDPH3, LDS3	-
Z	T45	-

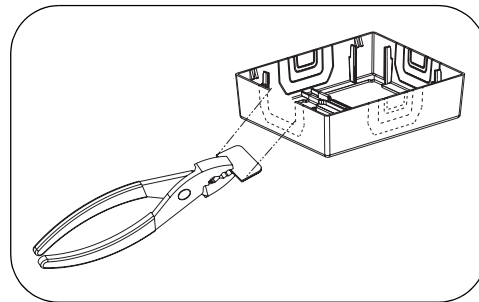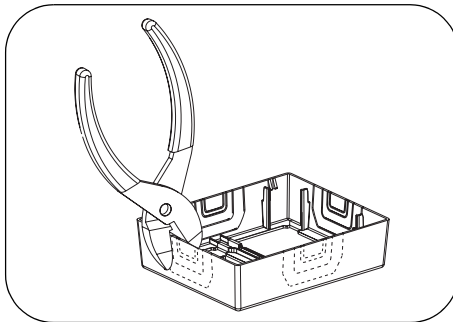

DIVIDER WALL BREAKOUTS

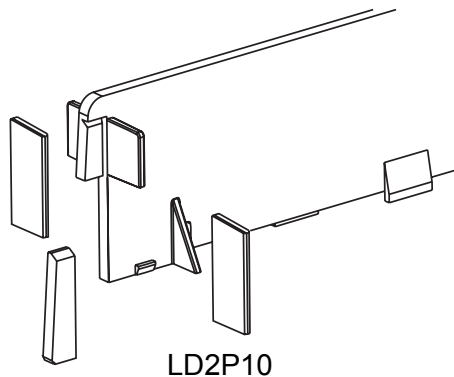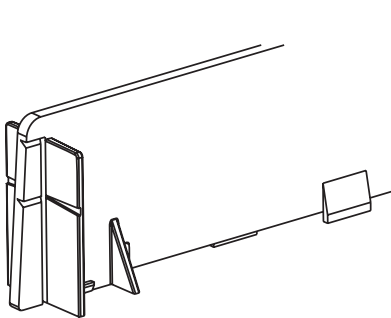

LD2P10

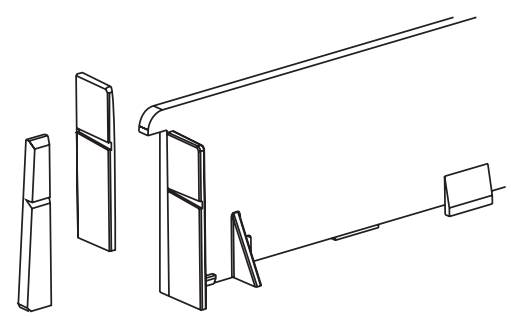

T45

Instruction Sheet RW68

WORLDWIDE SUBSIDIARIES AND SALES OFFICES

17301 Ridgeland Avenue
Tinley Park, IL 60477-3091
Web Site: www.panduit.com



Technical Support: 866-405-6656
Fax: 866-449-1702
Email: netconnsupport@panduit.com