



Installation Options for Front of Module

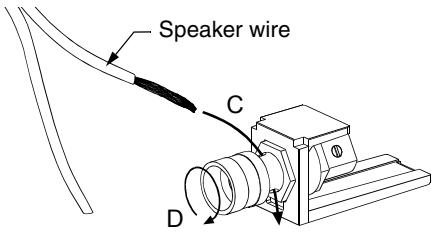


Option 1

- Strip off about 1/2" to 3/4" of outer jacket from the speaker wire. Twist conductor strands together.
- Remove termination cap from front side of module by rotating counter-clockwise.
- Insert the exposed portion of the speaker wire into the side hole in the binding post shaft.
- Re-install termination cap by rotating clock-wise until wire is secure.

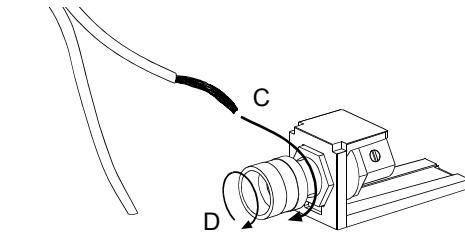

Option 2


- Strip off about 1/2" to 3/4" of outer jacket from the speaker wire. Twist conductor strands together.
- Remove termination cap from front side of module by rotating counter-clockwise.
- Curve exposed wire slightly. Wrap wire around the shaft.
- Re-install termination cap by rotating clock-wise until wire is secure.

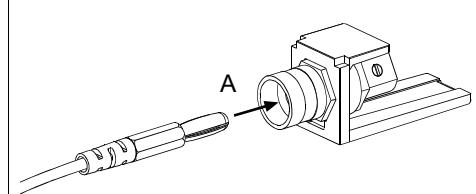

Option 3


- Insert Banana plug straight into the shaft on the front side of module.

Installation Options for Rear of Module

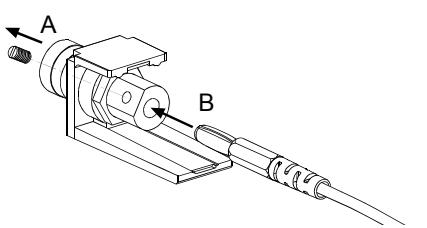

Option 1

- Remove set screw from rear shaft.
- Insert Banana plug straight into the shaft on the rear side of module.
- Discard set screw.

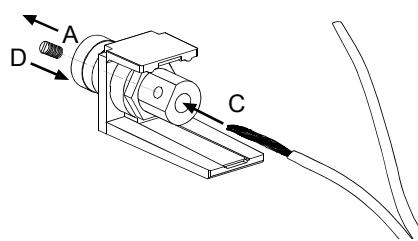

Option 2

- Remove set screw from rear shaft.
- Strip off about 1/2" to 3/4" of outer jacket from the speaker wire. Twist conductor strands together.
- Insert exposed wires into shaft on the rear side of module.
- Replace screw and tighten until wire is secure.

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp